



JETRUS

JET в России

JMD-1S

NANO MILL DRILL

JMD-1S ... JRM2001M.....1-230V 50Hz


PARTS LIST



Импортер в РФ: ООО «ИТА Технолоджи»
105082, Москва, Переведеновский пер., д. 17
www.jettools.ru

Made in PRC / Сделано в КНР

Parts Breakdown for JMD-1S Nano Mill Drill

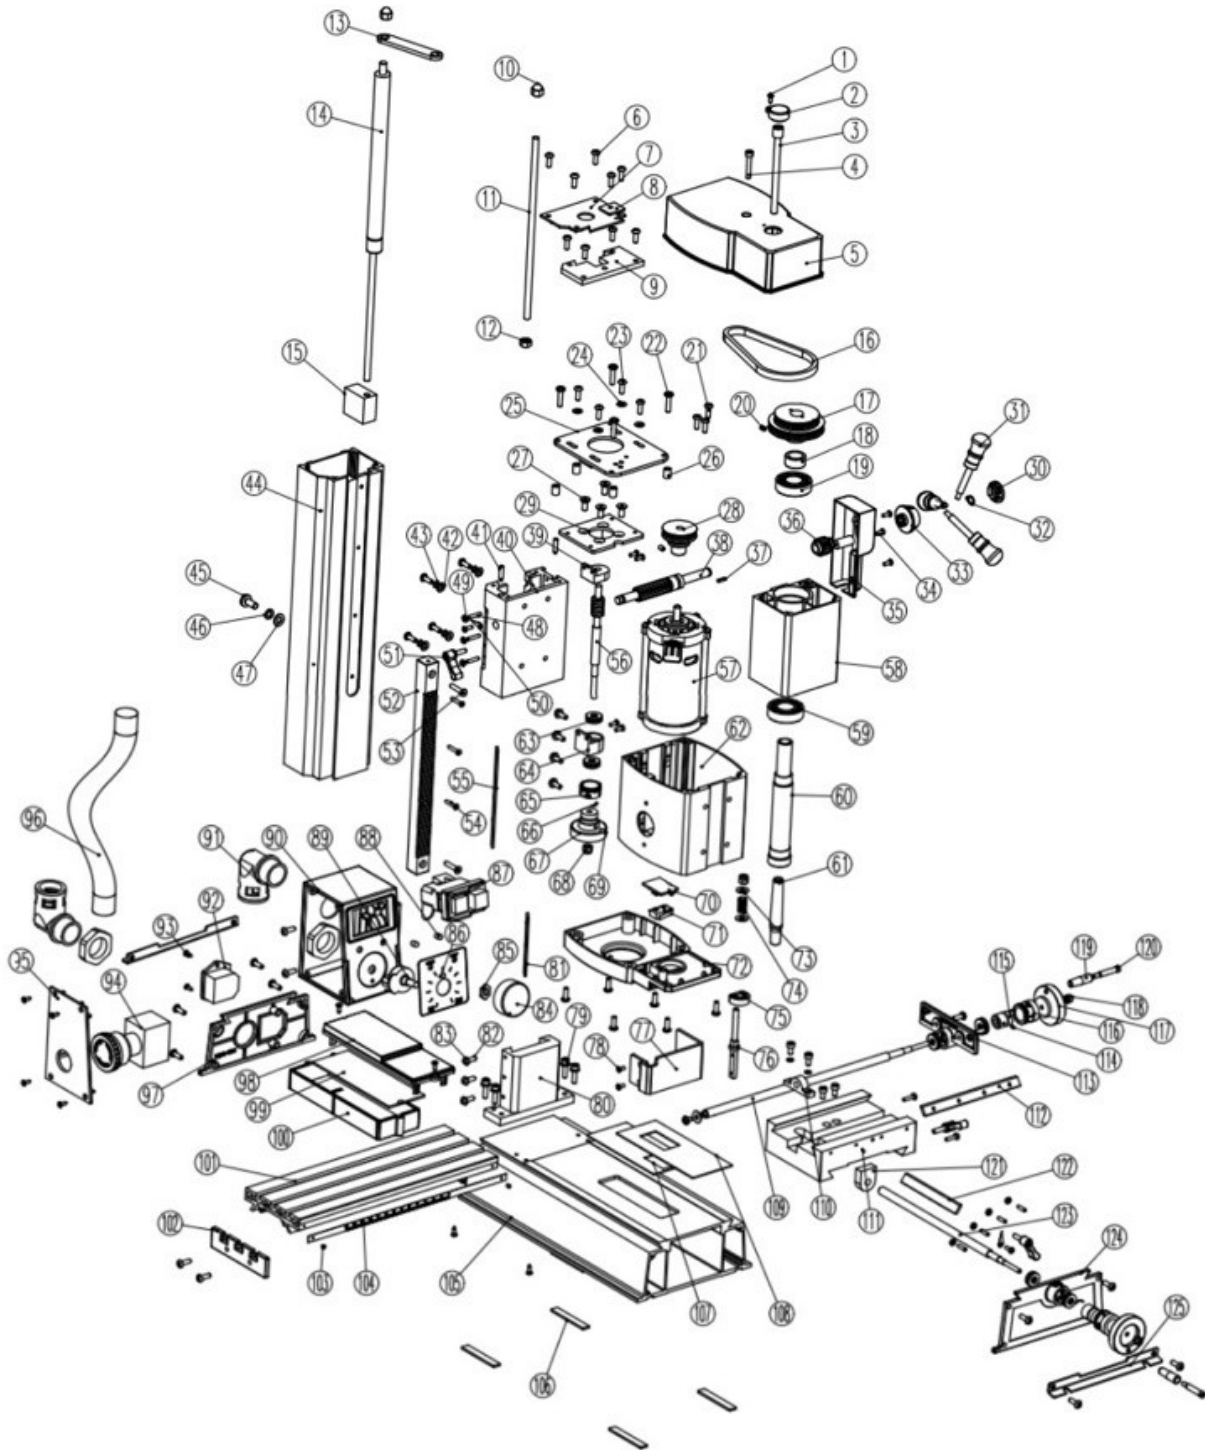

Part List for JMD-1S Nano Mill Drill

No.	Part No.	Description	Size	Qty.
1	JMD1S-001	Screw	ST2.9*6.5	1
2	JMD1S-002	Cover		1
3	JMD1S-003	Draw bar		1
4	JMD1S-004	Screw	M4*25	1
5	JMD1S-005	Spindle box cover		1
6	JMD1S-006	Screw	M4*12	31
7	JMD1S-007	Column cover plate		1
8	JMD1S-008	Shield		1
9	JMD1S-009	Connecting blocks		1
10	JMD1S-010	Acorn nut	M6	1
11	JMD1S-011	Connecting rod		1
12	JMD1S-012	Nut	M6	1
13	JMD1S-013	Air rod joint		1
14	JMD1S-014	Air spring	4kg	1
15	JMD1S-015	Connecting blocks		1
16	JMD1S-016	V belt		1
17	JMD1S-017	Spindle pulley		1
18	JMD1S-018	Spindle spacer		1
19	JMD1S-019	Bearing	6003-2Z	1
20	JMD1S-020	Screw	M4*5	2
21	JMD1S-021	Screw	M4*6	4
22	JMD1S-022	Screw	M4*18	4
23	JMD1S-023	Screw	M4*8	8
24	JMD1S-024	Washer	4	5
25	JMD1S-025	Motor fixing plate		1
26	JMD1S-026	Fixed sleeve		4
27	JMD1S-027	Screw	M4*10	4
28	JMD1S-028	Motor pulley		1
29	JMD1S-029	Motor connection board		1
30	JMD1S-030	Handle seat cover		1
31	JMD1S-031	Downfeed handle		3
32	JMD1S-032	Elastic collar		1
33	JMD1S-033	Downfeed handle hub		1
34	JMD1S-034	Screw	M3*8	9
35	JMD1S-035	Protective cover		1
36	JMD1S-036	Gear		1
37	JMD1S-037	Key	2*2*10	1
38	JMD1S-038	Gear shaft		1
39	JMD1S-039	Worm gear seat		1
40	JMD1S-040	Guide rail seat		1

Part List for JMD-1S Nano Mill Drill

No.	Part No.	Description	Size	Qty.
41	JMD1S-041	Screw	M4*16	2
42	JMD1S-042	Flat washer	4	12
43	JMD1S-043	Spring washer	4	18
44	JMD1S-044	Column		1
45	JMD1S-045	Screw	M6*14	1
46	JMD1S-046	Spring washer	6	1
47	JMD1S-047	Flat washer	6	1
48	JMD1S-048	Screw	M3*18	3
49	JMD1S-049	Screw	M3	9
50	JMD1S-050	Pointer		2
51	JMD1S-051	Adjustable handle screw knob		3
52	JMD1S-052	Rack		1
53	JMD1S-053	Screw	M4*20	2
54	JMD1S-054	Screw	M3*16	2
55	JMD1S-055	Gib Z-axis		1
56	JMD1S-056	Worm		1
57	JMD1S-057	Motor		1
58	JMD1S-058	Spindle box		1
59	JMD1S-059	Bearing	61904-2Z	1
60	JMD1S-060	Spindle		1
61	JMD1S-061	Taper shank		1
62	JMD1S-062	Motor cover		1
63	JMD1S-063	Bearing	6*14*5	6
64	JMD1S-064	Bearing seat		1
65	JMD1S-065	Indicator ring		1
66	JMD1S-066	Spring clip		3
67	JMD1S-067	Fine feed knob		1
68	JMD1S-068	Nut	M5	2
69	JMD1S-069	Screw	M3*6	1
70	JMD1S-070	Microswitch cover		1
71	JMD1S-071	Microswitch		1
72	JMD1S-072	Spindle box lower cover		1
73	JMD1S-073	Flat washer	5	2
74	JMD1S-074	Compression spring		1
75	JMD1S-075	Guard cam		1
76	JMD1S-076	Guard rotating shaft		1
77	JMD1S-077	Safety guard		1
78	JMD1S-078	Screw	M3*8	2
79	JMD1S-079	Screw	M4*16	4
80	JMD1S-080	Column fixed seat		1

Part List for JMD-1S Nano Mill Drill

No.	Part No.	Description	Size	Qty.
81	JMD1S-081	Column plug iron		1
82	JMD1S-082	Screw	M4*16	3
83	JMD1S-083	Nut	M4	3
84	JMD1S-084	Speed control knob		1
85	JMD1S-085	Potentiometer lock nut		1
86	JMD1S-086	Switch panel		1
87	JMD1S-087	Main power switch		1
88	JMD1S-088	Power indicator light		2
89	JMD1S-089	Potentiometer	4.7K	1
90	JMD1S-090	Electrical switch box		1
91	JMD1S-091	Pipe joint	M25x1.5	2
92	JMD1S-092	Power socket with fuse		1
93	JMD1S-093	Screw	ST2.9*9.5	8
94	JMD1S-094	Emergency stop switch		1
95	JMD1S-095	Switch box cover		1
96	JMD1S-096	Corrugated pipe		1
97	JMD1S-097	Dust cover		1
98	JMD1S-098	Circuit board cover		1
99	JMD1S-099	Circuit board	230V	1
100	JMD1S-100	Circuit board box		1
101	JMD1S-101	Work table		1
102	JMD1S-102	Worktable end cover		1
103	JMD1S-103	Label rivets	2x4	2
104	JMD1S-104	Work table scale label		1
105	JMD1S-105	Machine base		1
106	JMD1S-106	Silicone pad		4
107	JMD1S-107	Lead screw dustcover I		1
108	JMD1S-108	Lead screw dustcover II		1
109	JMD1S-109	X-axis lead screw		1
110	JMD1S-110	X-axis lead screw nut		1
111	JMD1S-111	Bed saddle		1
112	JMD1S-112	Gib X-axis		1
113	JMD1S-113	X-axis lead screw seat		1
114	JMD1S-114	Screw	M3*4	2
115	JMD1S-115	Scale ring sleeve		2
116	JMD1S-116	Scale ring		2
117	JMD1S-117	Handwheel		2
118	JMD1S-118	Nut	M4	2
119	JMD1S-119	Handwheel handle		2
120	JMD1S-120	Handwheel rod		2

Part List for JMD-1S Nano Mill Drill

No.	Part No.	Description	Size	Qty.
121	JMD-1S-121	Y-axis lead screw nut		1
122	JMD-1S-122	Gib Y-axis		1
123	JMD-1S-123	Y-axis lead screw		1
124	JMD-1S-124	Y-axis lead screw seat		1
125	JMD-1S-125	Machine base holder		2

Standard Accessories List for JMD-1S Nano Mill Drill

No.	Part No.	Description	Size	Qty.
1	JMD1S-ACC-01	Drill chuck and key	1-6.0mm/B10	1
2	JMD1S-ACC-02	Drawbar		1
3	JMD1S-ACC-03	Taper shank	MT1/B10	1
4	JMD1S-ACC-04	Double open-end spanner	5.5 - 19 mm	1
5	JMD1S-ACC-05	Inner hex wrench	1.5mm	1
6	JMD1S-ACC-06	Inner hex wrench	3mm	1
7	JMD1S-ACC-07	Inner hex wrench	5mm	1
8	JMD1S-ACC-08	Replacement fuse	1A	1
9	JMD1S-ACC-09	Handle for X,Y axis		2
10	JMD1S-ACC-10	Handle for Z axis		3



● About the fuse

The position of the fuse is on back of machine, beside the power socket.



Use a thinner Phillips screwdriver to pry open the cover and replace it.

JMD-1S...JMD-1S.....1~230V,50Hz

